

# REPLACEMENT INSTRUCTIONS

## *Punto convertible*

Set the glass flat for a few hours (not required)




Open the zipper with a flat-bladed screwdriver from the inside starting from the middle at the bottom and moving it to the right



Continue on all the way. Pull out the 2 copper filaments with the same screwdriver in the area surrounded in green on the picture (right inside the car):



Once the 2 copper braids are clearly visible (picture above) connect a 12 V battery on (using car battery clamps) for about 30 seconds and press on the window from the outside of the vehicle to take off completely, and disconnect immediately the battery so as not to burn the hood:

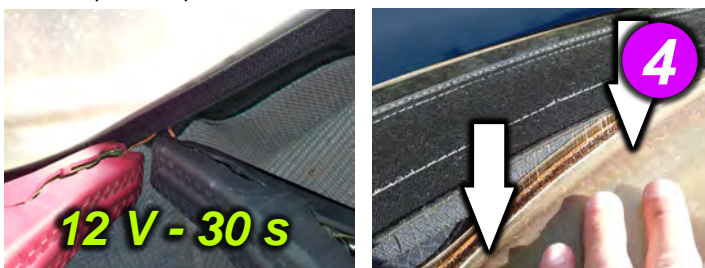

**Alternatively, without a battery:** Insert a flat screwdriver between the bezel and the hood and gradually take off the bezel, taking care not to drill your hood (to be done from the outside of the car).

Remove the old window :



Mounting the new window: align the window zipper teeth (pink) with the first hood teeth (green) as shown in this picture, the silver teeth of the screen must be aligned with the very first teeth of the hood. The teeth of the end of the zipper of the new window are also silver, but these are the starting ones that are important.

Then gently close the zipper to the left (from the inside):



Continue to close from the inside of the car and remove the zip slider:



Glue the window without pressing too hard (risk of opening the closure):



Operation completed, enjoy a perfect visibility!

