

INSTRUCTIONS

Street Ka replacement rear window kit

Your UV proof green tinted rear window with a zip slider:



Open and push up the front part of the hood:



Using a small flat screwdriver, lift the 2 metal staples (top middle of the window):



Store them in safe place, as they will be used to secure the new rear-window:




Carefully separate zip teeth using the same little screwdriver:




Pull from one side of the rear window in order to remove it completely:



Remove old grey seal remaining on the edge of the hood using a spatula and a hot gun treating 5" at a time. Clean the edge of the hood with solvent.

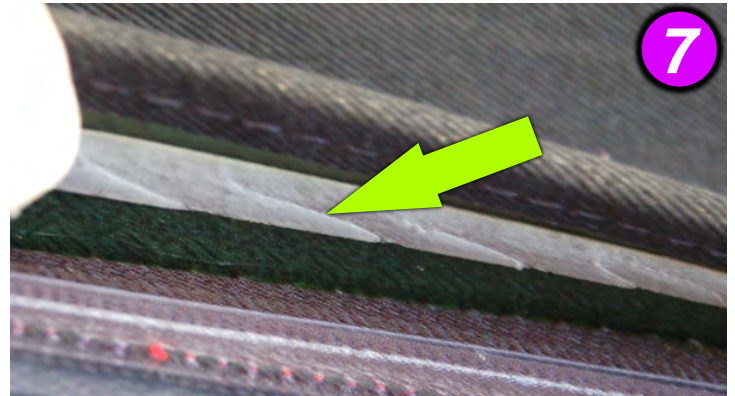

The first and the last teeth on the zip are the silver ones. They must be aligned with the beginning and the end of the zip on the hood side (cf picture). This will allow optimal fit, thus avoiding creases once the rear window has been zipped up. It is not crucial for these teeth to be perfectly in line with each other, a slight gap of one or two teeth being eventually acceptable. Then pull the zip slider to the left:

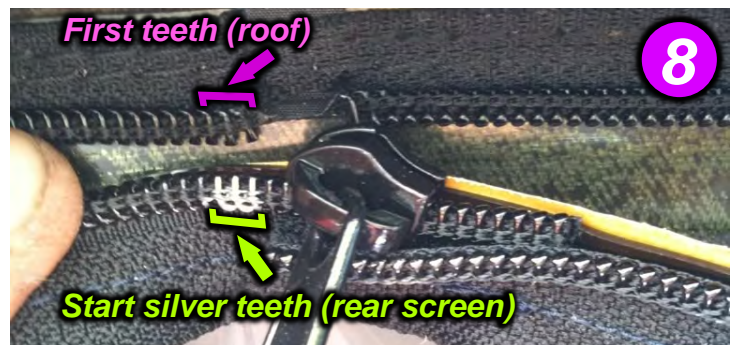

Fasten the two staples using pliers. First, open them up slightly to ensure a bit grip around the whole zip, then tighten them up to secure the whole zip.



Close hood. Remove protective film from the seal and press it up against the edge of the hood. Put the hook and loop (inside the car):



Well Done ! ENJOY PERFECT REAR VIEW !

