


# FITTING INSTRUCTIONS

## BMW z3 convertible rear screen

Set the glass flat for a few hours (not required).

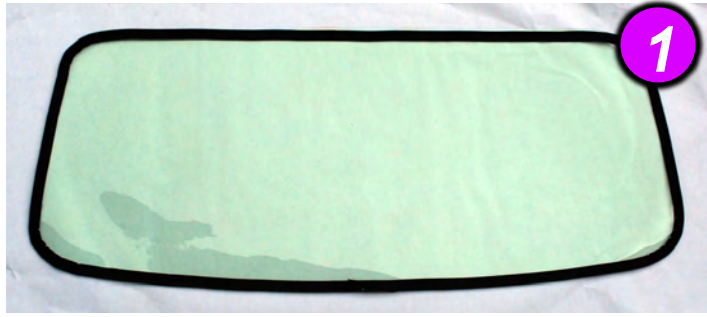


Raise the front and then the back of the convertible top at 90° like this:



Leverage with a small flat screwdriver to remove the clip without damaging the zip fastener:



Separate the zipper with the screwdriver:

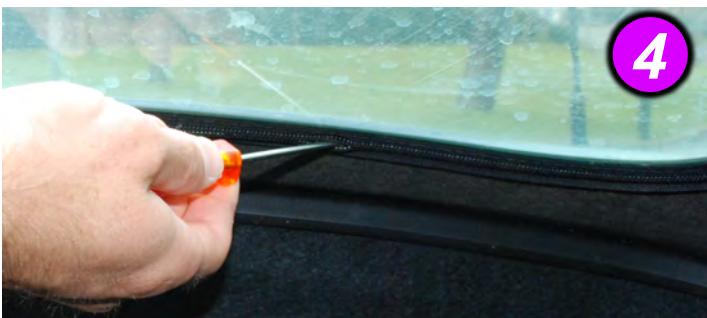

Peel off the screen by pulling it inwards:



Mounting the new window: align the window zipper teeth (pink) with the first hood teeth (green) as shown in this picture, the silver teeth of the screen must be aligned with the very first teeth of the hood. The teeth of the end of the zipper of the new window are also silver, but these are the starting ones that are important.



Gently close the clasp to the right, leave it on the zip fastener at the end. Hook the clip on the starting part:



Insert the convertible top fabric into the rubber ring outdoors with a thin blade or a flat screwdriver:



Operation completed, enjoy a perfect visibility!

